 
Men Groomer Lady **Double-Head Electric Shaver**




Please read the user manual carefully before using

▶ Product Introduction

Thank you for choosing our company's dual-head electric hair trimmer. This product features a unique design, with one end equipped with a clipper head specially designed for smoothly trimming long hair, and the other end fitted with a floating dual-ring round head, capable of closely adhering to the skin to efficiently remove short hair. It adopts an innovative design with dual heads and dual motors, offers 7-level waterproof functionality, and operates safely and quietly, providing a novel experience for your personal grooming.

▶ Component Description

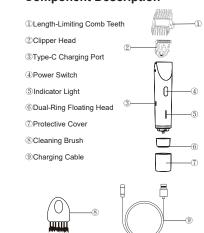

Note: This product contains a built-in lithium battery. Please be sure to operate in accordance with the instructions provided in the manual.

1

▶ Component Disassembly Instructions

The following illustrations and text are intended as a guide for operations:



1.Remove the limit comb Slide the side of the comb teeth to loosen and then remove the limit comb.

2.Remove the clipper blade head

Push the blade teeth backwards, loosen and then remove the clipper blade head.



3. Remove the rotary blade head Twist the rotary blade head counter clock wise until it loosens, then remove it.



4.Remove the rotary Twist the four pillars on the white fixing part inside the blade head. Once loosened, remove the fixing part, blade, and screen.

▶ Ndicator Light Status Description

No.	Item	Status	
1	Clipper Head Working	Red and Blue Light Stay On	
2	Round Head Working	Blue Light Stays On	
3	Low Battery Warning	Indicator Light Blinks	
4	Charging	Red Light Blinks (Breathes)	
5	Charge Complete	Red Light Stays On	

▶Specifications

No.	Item	Unit	Specification
1	Operating Voltage	V	3.7-4.2
2	Operating Current	mA	400
3	Power	W	2
4	Waterproof Level	1	IPX7
5	Battery Capacity	mAh	400
6	Charging Current	mA	400
7	Charging Time	Н	2
8	Size	mm	167*33*32
9	Weight	g	138

▶ Precautions

Contraindications

it is in operation.

1.Not for use by children.

2.Do not use on facial skin that is injured or severely acne-prone.

3. Avoid excessive movement or prolonged use during operation.

4.Do not remove the blade head while the device is working.

Storage Requirements

Do not expose the product to high-temperature environments.

Keep away from corrosive liquids.

Store the product out of reach of children.

○ Please do not leave the ○ Do not attempt to disassemble

product unattended when the main unit yourself.



Off the blade head is damaged, discontinue use immediately.



long hair.

shaving mode.



Olf the product is dropped or hit hard, check for damage before continuing use.



► Guidance for Usage

Usage Instructions The following are illustrated instructions for using this device:



1.Press and hold the 2.Use the serrated clipper "On/Off" button for 2 head against the direction seconds to select the of hair growth to trim longer clipper mode for trimming hairs.



3.Press briefly once more to activate the round head



5.After use, press and hold the "On/Off" button for 2 seconds to turn the the storage area. device off.



4.Use the dual-ring rotary head against the direction of hair growth, making circular motions to shave off short hairs.



6.Remove the used blade head to clean the hair from


▶Troubleshooting

Fault Symptom	Cause Analysis	Solutions
The main unit is not working (blue light turns on then off)	Overload causing the circuit system to protect and forcibly shut down	Reinstall the round head blade and check if the white fixture is installed backwards. Remove the round head to see if there is any foreign object blocking the blade. If the above attempts do not work, please contact after-sales service.
The main unit is not working (blue and red lights turn on then off)	Overload causing the circuit system to protect and forcibly shut down	Remove the clipper head to check if any foreign objects are jamming the blade. If the above attempts do not work, please contact after-sales service.
The main unit		1.Use after charging.

is not working | Insufficient battery | 2.If the above attempts do

▶Electrical Schematic

(no response)

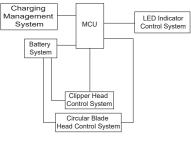

▶ Attention


Waste Disposal

the waste.

Environmental Protection Product hosts, packaging and accessories are made from recyclable materials. Sorting and recycling waste products can help reuse materials.

In view of the consistent policy of continuous product improvement the company reserves the right to change product specifications without notice.

If there is such a mark on the product, instruction manual or packaging, it is reminded that this product cannot be treated as general household waste at the end of its service life.Please recycle it according to the classification of

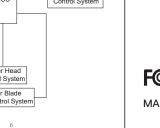

not work, please contact

after-sales service.

FC (E RoHs 🍪 🗵 MADE IN CHINA