Beard Trimmer

User Manual

Technical Parameters

Model Number: HPS001	Usage: For Beard Trimming
Rated Voltage: 3.7V ⎓	Battery Capacity: 400mAh
Input Voltage: 5V ⎓	Usable Time: 75 Minutes
Rated Power: 5W	Charging Time: 1 Hour
Materials: PC,ABS,Stainless-steel	
Standard: GB 4706.1	

Product Accessaries

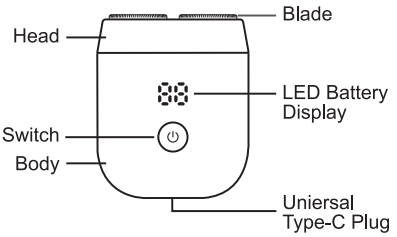

Type-C Charging Wire

Cleaning Brush

Travelling Bag

Charging Instructions

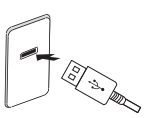

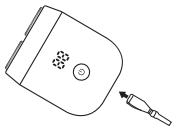

1. Turn off the beard trimmer before charging.
2. When the battery is lower than 10%, please charge the beard trimmer.
3. Plug the Type-C head into the beard trimmer, the other head to the charging adapter.
4. Please fully charge the beard trimmer right before first usage. It takes 1 hour for fully charging.
5. If you won't use the beard trimmer for a long time, make sure it's fully charged one time every half-a-year.

Switch Operations

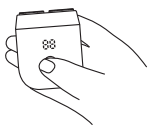

Press the button to turn on and turn off the beard trimmer.
Press the button for 3 seconds to lock or unlock the switch.

Maintenance

Please clean the beard trimmer after each usage.

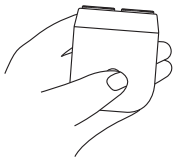
turn off the beard trimmer

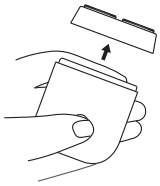
unload the upper cap

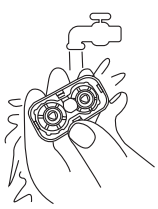
wash the beard trimmer body and the blades

Safety Cautions

Do not use a wet hand to pull the charging cable, or you might be electrocuted.



Please stop using the charger if it works abnormal.

Do not pull the cable, or it might cause electrical leakage, short circuit or fire.

Do not use a broken charging cable.

Please use an original charger or charging cable instead of other brands'.



Please wipe the charging port dry before charging.

Be careful operating the clipper. This is not a toy; please keep the clipper, attachments and accessories out of reach of the children.

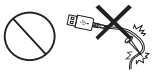

The ceramic blade is fragile, please be careful while loading and unloading. If the blade breaks, please change it immediately.

Warranty Services

1. We provide 1 year free warranty service for all hair clippers.
2. We will not provide free service for hitches causing by user's personal misoperations, including but not limited to the below:

a. Hitches caused by users disassembling the clipper themselves.
b. Hitches caused by users accidentally dropping the clipper.
c. Hitches caused by users' inappropriate maintenance.
d. Hitches caused by users' incorrect operations on the clipper not according to this manual.
e. Hitches caused by unauthorized repair shop's incorrect repair.

Made in China